
mail: valued_service@outlook.com

Installing the Monitor -----

Troubleshooting -----

Moving and Lifting the Monitor ----- 10

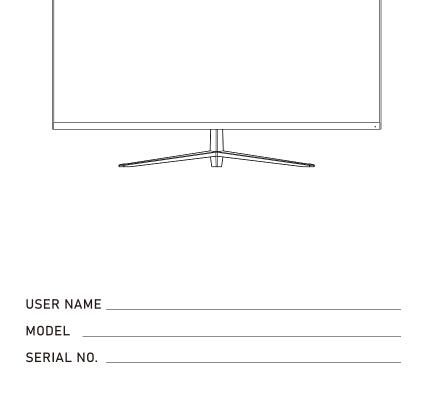

> Windows 7: Go to Control Panel o Appearance and Personalization o Display

▶ Windows 8(Windows 8.1): Go to Settings \rightarrow Control Panel \rightarrow Appearance and

▶ Windows 10: Go to Settings → System → Display → Advanced display settings,

► Windows 7: Set power-saving mode in Control Panel → Appearance

and Personalization o Personalize o Screen Saver Settings o Power

► Windows 8(Windows 8.1): Set power-saving mode in Settings →

Control Panel o Appearance and Personalization o Personalize o

• Windows 10: Set power-saving mode in **Settings** o **Personalization** o

Lock screen → Screen timeout settings → Power & sleep or BIOS SETUP

Screen Saver Settings \rightarrow Power options or BIOS SETUP on the PC.

Personalization → **Display** → **Adjust Resolution**, and adjust the resolution.

→ **Adjust Resolution**, and adjust the resolution.

How do I set power-saving mode?


options or BIOS SETUP on the PC.


and adjust the resolution.


Welcome to contact us as below. Whatsapp: +1 (253)780 8605 label attached to the product provides information for technical support. Q & A **TABLE OF CONTENTS** Refer to the user manual for your PC or graphics card for further instructions Important Precautions -----•How can I change the frequency? - Precaotions to the Adapter and Electrical Power - Set the frequency on your graphics card. - Precautions in Cleaning the Product lacktriangle Windows 7: Go to Control Panel ightarrow Appearance and Personalization ightarrow Display - Precautions in Installing the Product o Screen Resolution o Advanced settings o Monitor, and adjust Refresh rate under Monitor settings. ▶ Windows 8(Windows 8.1): Go to Settings o Control Panel o Appearance and Personalization o Display o Screen Resolution o Advanced settings oControl Menu Operation ----- 03 Monitor, and adjust Refresh rate under Monitor settings On Screen Display(OSD) ----- 04 ▶ Windows 10: Go to Settings \rightarrow System \rightarrow Display \rightarrow Advanced display settings → Display adapter properties → Monitor, and adjust Screen refresh rate under Making Connections ------ Connecting and Using a PC •How can I change the resolution? - Corrct posture to use the product

*Read the owner's manual(CD)carefully and keep it at hand.Please note that the

IMPORTANT PRECAUTIONS The screen retains an image. Please read these safety precautions carefully before using the product. isplaying a still image for a prolonged time may cause damage t the screen,resulting in the retention of the image. even whenthe monitor is o extend the lifetime of the monitor, use a screensaver Failure to follow those warnings may result in death, serious injury or damage to the product or other property. Precautions to the Adapter and Electrical Power • Vertical Frequency: In order to display an image, the screen must be refreshed dozens Be sure to use power cords and AC adapters provided or approved by Gawfolk. of times per second, like a fluorescent lamp. The number of times the screen is refreshed The use of non-approved products may cause a fire or electric shock. per second is called vertical frequency, or refresh rate, and is represented by Hz. • Do not touch the power plug or AC adapter with wet hands. Additionally, if the cord pin is wet • Horizontal Frequency: The time it takes to display one horizontal line is called the or covered with dust, dry the power plug completely or wipe dust off before plugging in the cord. horizontal cycle. If 1 is divided by the horizontal interval, the result is the number of Otherwise, this may cause a fire or electric shock. horizontal lines displayed per second. This is called horizontal frequency and • Make sure to completely insert the power cord into the AC adapter.If loosely connected, isrepresented by kHz. the poor connection may cause a fire or electric shock. • Check if the graphics card's resolution or frequency is within the range allowed by the • If water or any foreign substance goes inside the product (TV, monitor, power cord, or AC adapter) monitor and set it to the recommended (optimal) resolution Control Panel > Display > disconnect the power cord immediately and contact the service center. Otherwise, **Settings** in Windows. (The settings may differ depending on the operating system (OS) this may cause a fire or electric shock due to damage to the product. When unplugging the power cord, always pull it by the plug. Do not bend the power cord with excessive force.The power line can be damaged, which may cause electric shock or fire. Not setting the graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area or misalignment of the display. Be careful not to step or place heavy objects (electronic appliances, clothing, etc.) • The setting methods may be different depending on the computer or operating system, objects.Damaged power cords may cause a fire or electric shock. and some resolutions may not be available depending on the performance of the graphics card. If this is the case, contact the manufacturer of the computer or graphics card for assistance. • Use only a properly grounded plug and receptacle. If you do not you may be electrocuted or injured. Or the product might be damaged. • Do not use a damaged or loose plug. This may cause electrical shock or fire. Operate the display only from a power source (i.e. voltage) indicated in the product specification. Otherwise the product can be damaged, fire can occur or you may be electrocuted. If you are not sure what type of power supply you have, consult a certified electrician. • In the presence of thunder and lightning, never touch the power cord and signal cable because it can be very dangerous. It can cause electric shock. Do not connect several extension cords, electrical appliances or electrical heaters to a single outlet Use a power bar with a grounding terminal designed for exclusive use with the computer.A fire can break out due to overheating. • If you don't intend to use the product for a long time, unplug the power cable from the product. Covering dust can cause a fire, or insulation deterioration can cause electric leakage or fire.

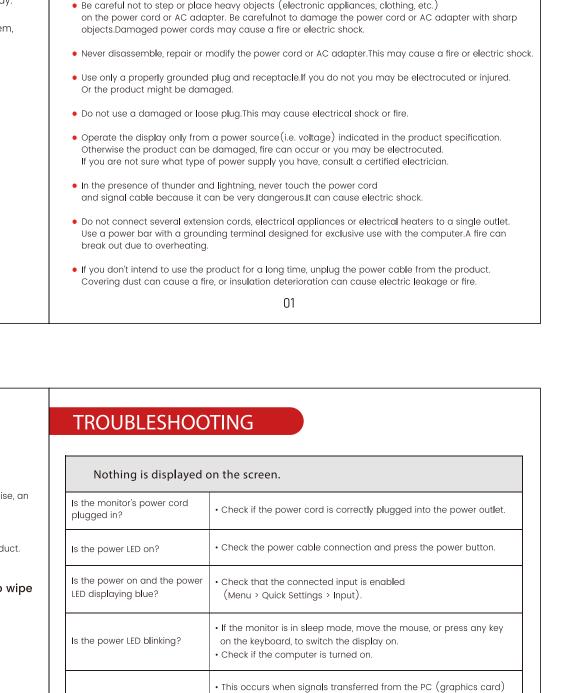

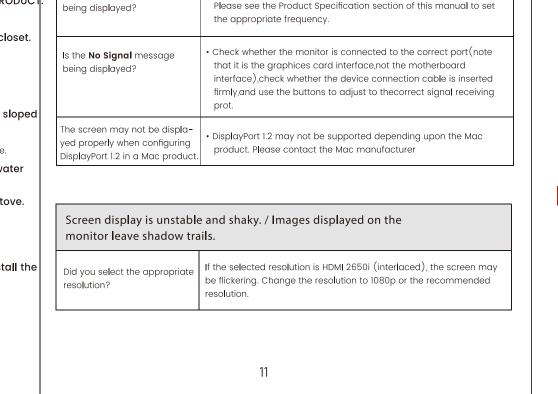

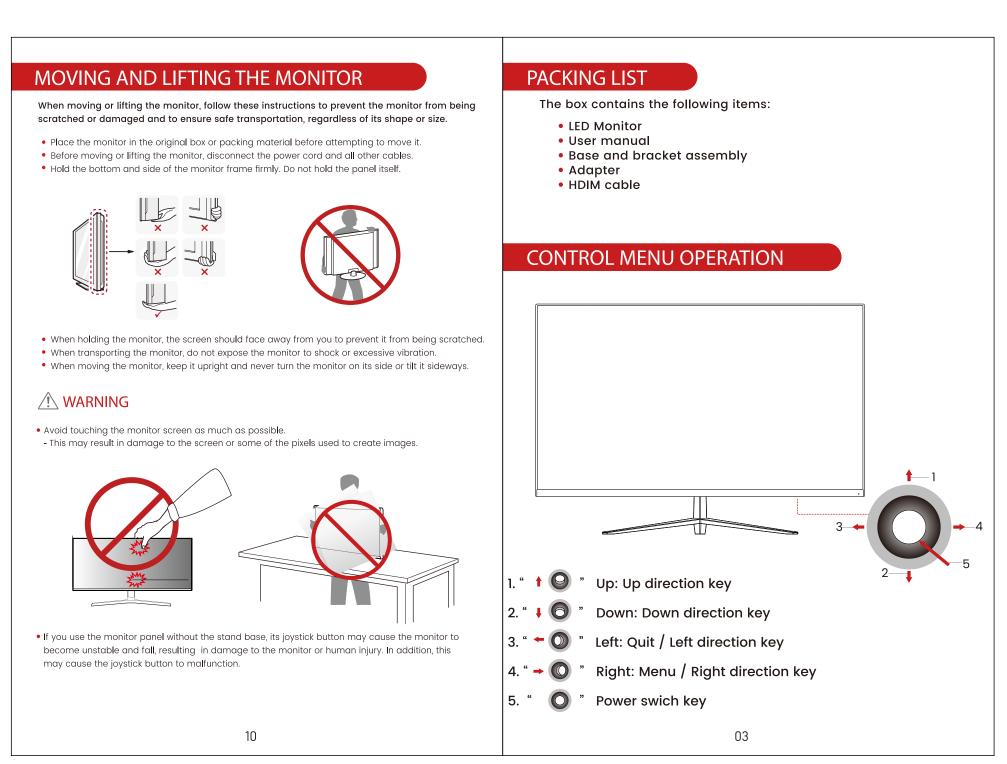

ON SCREEN DISPLAY(OSD)

Explination of individual options:

This option will adjust the amount of differ-

values. Use the up and down buttons to

Press MENU to shows the main choice

This selection will change the horizontal

This selection will change the vertical

position of the On Screen Display Menu.

Use the up and down buttons to move

position of the On Screen Display Menu.

Use the up and down buttons to change

menus, press MENU into ECO choice item,

Use the up and down buttons to mode setting.

increase or decrease the contrast setting.

ence between white values and black

to increase or decrease brightness setting.

Press MENU to shows the main choice menus, press MENU into DCR choice

and then press up or down to adjust clock image display to track stability.

sition.V.

1. LUMINANCE

COLOR TEMP

4. OSD SETTING

2. IMAGE

RESET

6. MISC

. LUMINANCE

Brightness Adjustment

• Contrast Adjustment:

ECO MODE Function:

DCR Function:

2. IMAGE SETUP


H.POSITION Adjustment:


the position left to right.


V.POSITION Adjustment:

display up and down.

CLOCK Adjustmen:

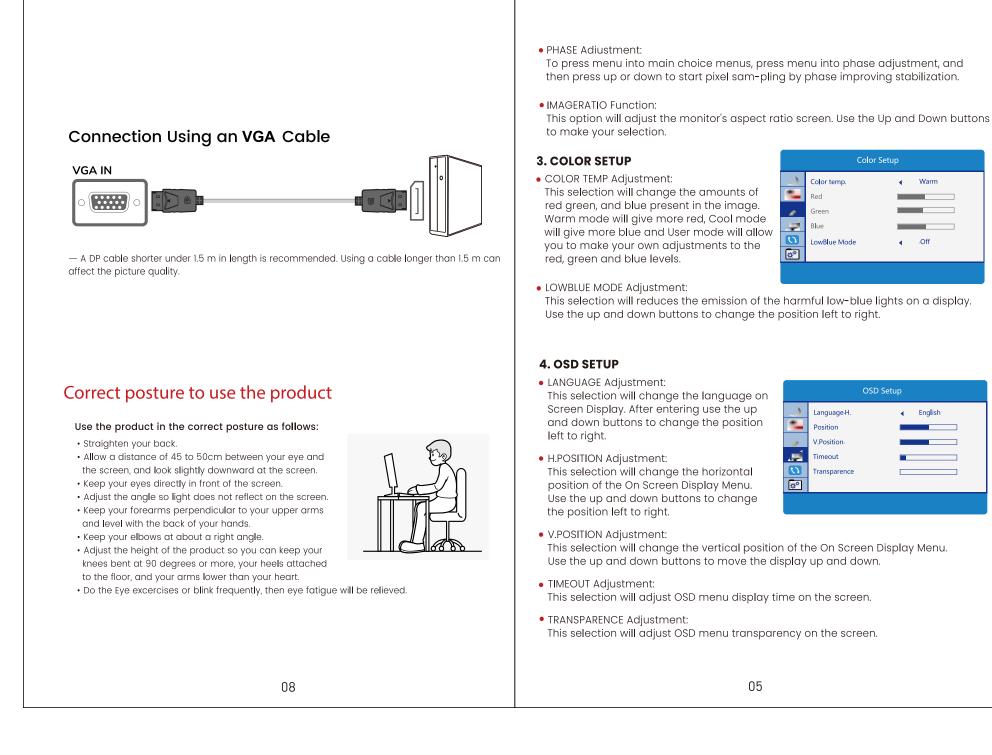

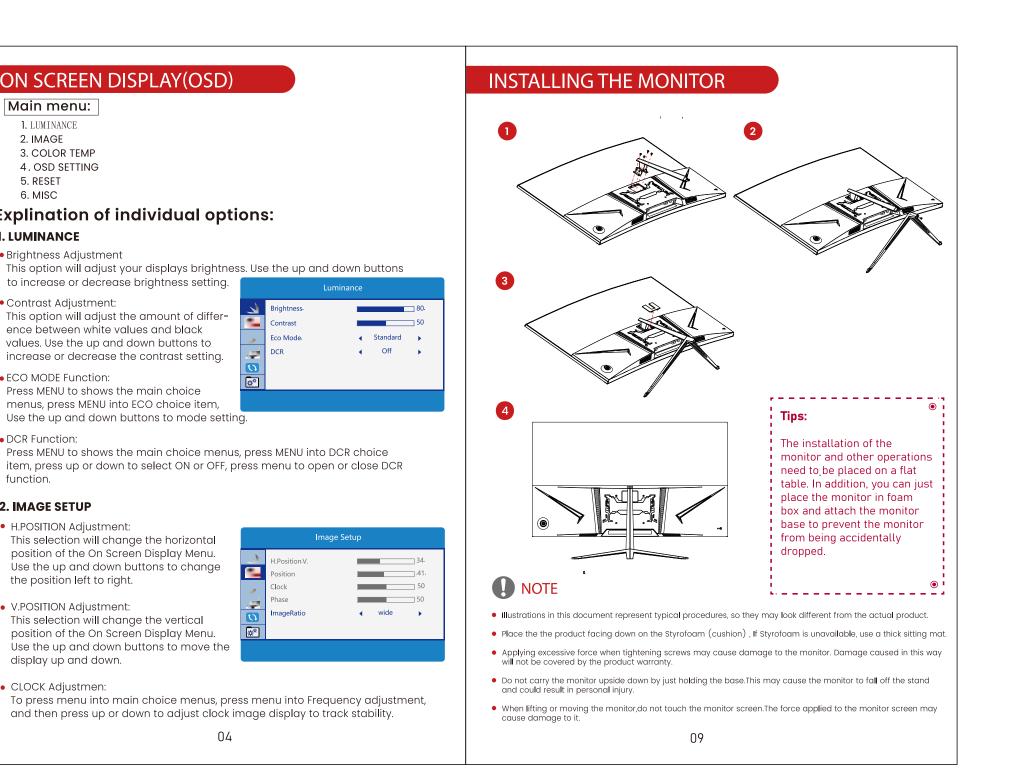

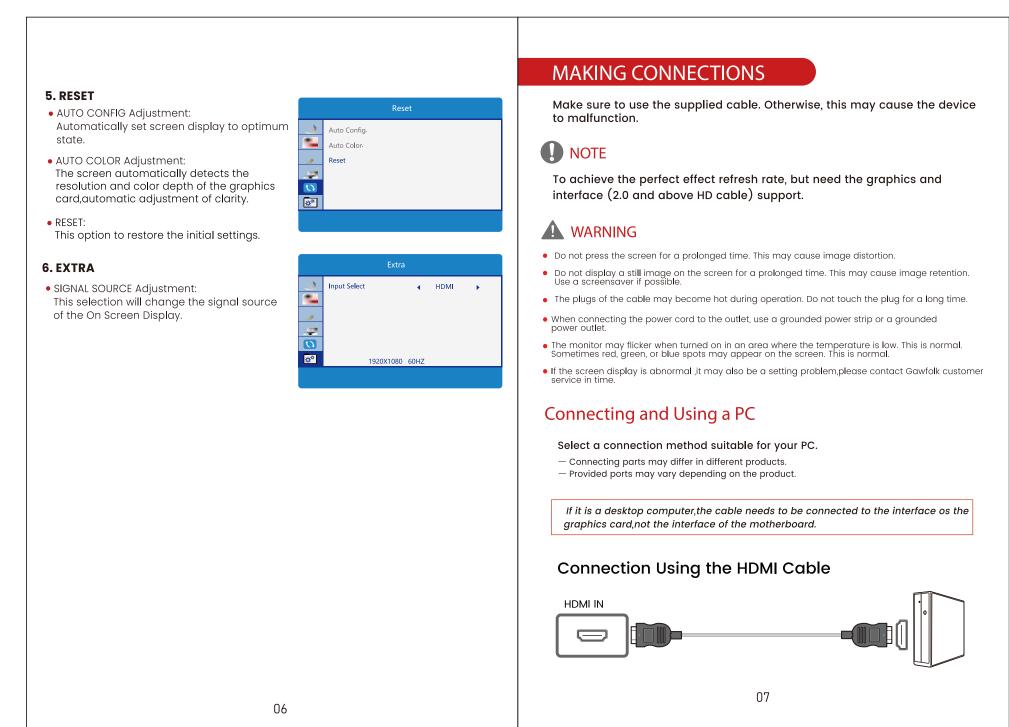

2. Disconnect the power cord from the product.

Precautions in Cleaning the Product

Hold the power cable by the plug and do not touch the cable with wet hands. Otherwise, an electric shock may result.

3. Wipe the product with a clean, soft and dry cloth. Do not apply a cleaning agent that contains alcohol, solvent, or surfactant to the product.

Do not spray water or detergent directly on the product. 4. Wet a soft cloth in water, wing it out well, and then use the cloth to wipe

5. Connect the power cord to the product when cleaning is finished.

6. Power on the product and PC.

1. Power off the product and PC.

Precautions in installing the Product

Is the **OUT OF RANGE** message are out of the horizontal or vertical frequency range of the monitor. DO NOT PLACE CANDLES, INSECT REPELLANTS OR CIGARETTES ON TOP OF THE PRODUCT DO NOTINSTALL THE PRODUCT NEAR HEAT SOURCES.

• Do not install the product in poorly ventilated spaces such as a bookcase or closet. Install the product at least 10cm away from the wall to allow ventilation.

• Keep the plastic packaging out of the reach of children. Children may suffocate.

• Do not install the product on an unstable or vibrating surface (insecure shelf, slope surface, etc.) - The product may fall and become damaged and/or cause an injury.

 Using the product in an area with excess vibration may damage the product or cause a fire. • Do not install the product in a vehicle or a place exposed to dust, moisture (water

• Do not expose the product to direct sunlight, heat, or a hot object such as a stove. The product lifespan may be reduced or a fire may result. Please install the product within the reach of young children.

- The product may fall and injure children. • Edible oil, such as soybean oil, can damage or deform the product. Do not install the product in a kitchen or near a kitchen counter