




### BATTERY INSTALLATION FUNCTION

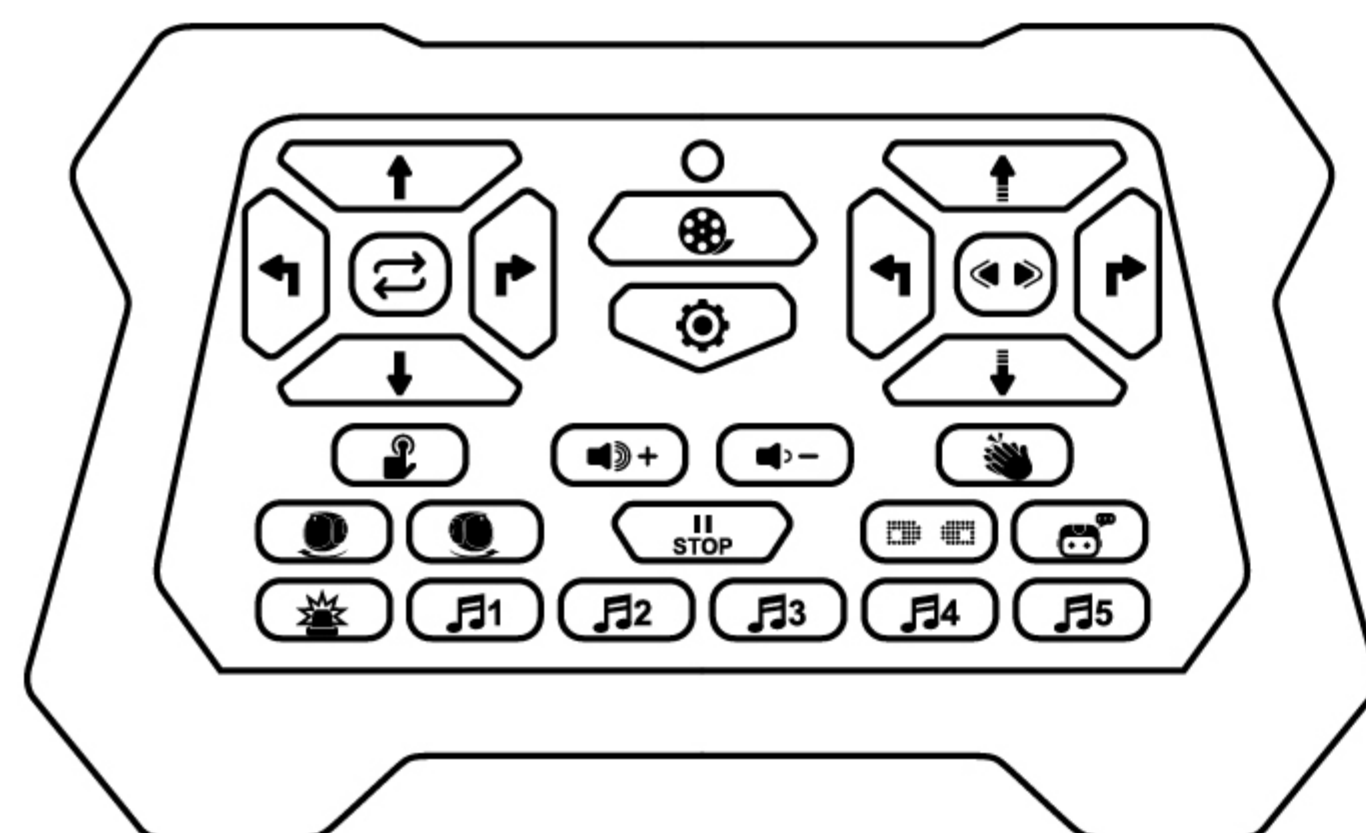




BACK VIEW OF CONTROLLER

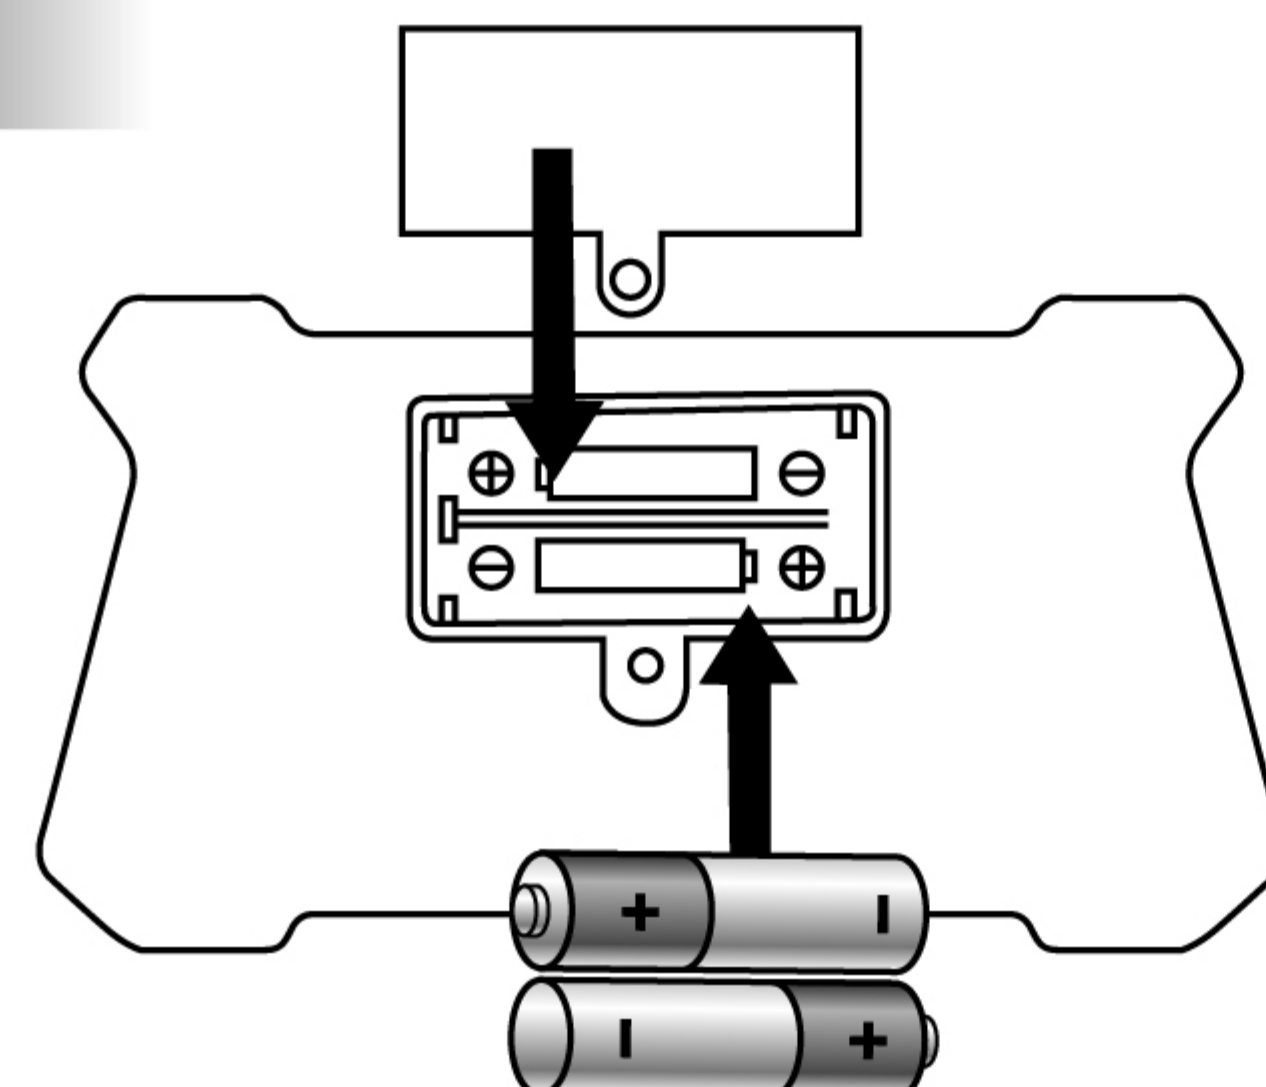


**BACK SIDE OF THE TRANSMITTER**  
USE 2\*1.5V"AA"BATTERY ARE NEEDED  
FOR REMOTE CONTROL (NOT INCLUDED)

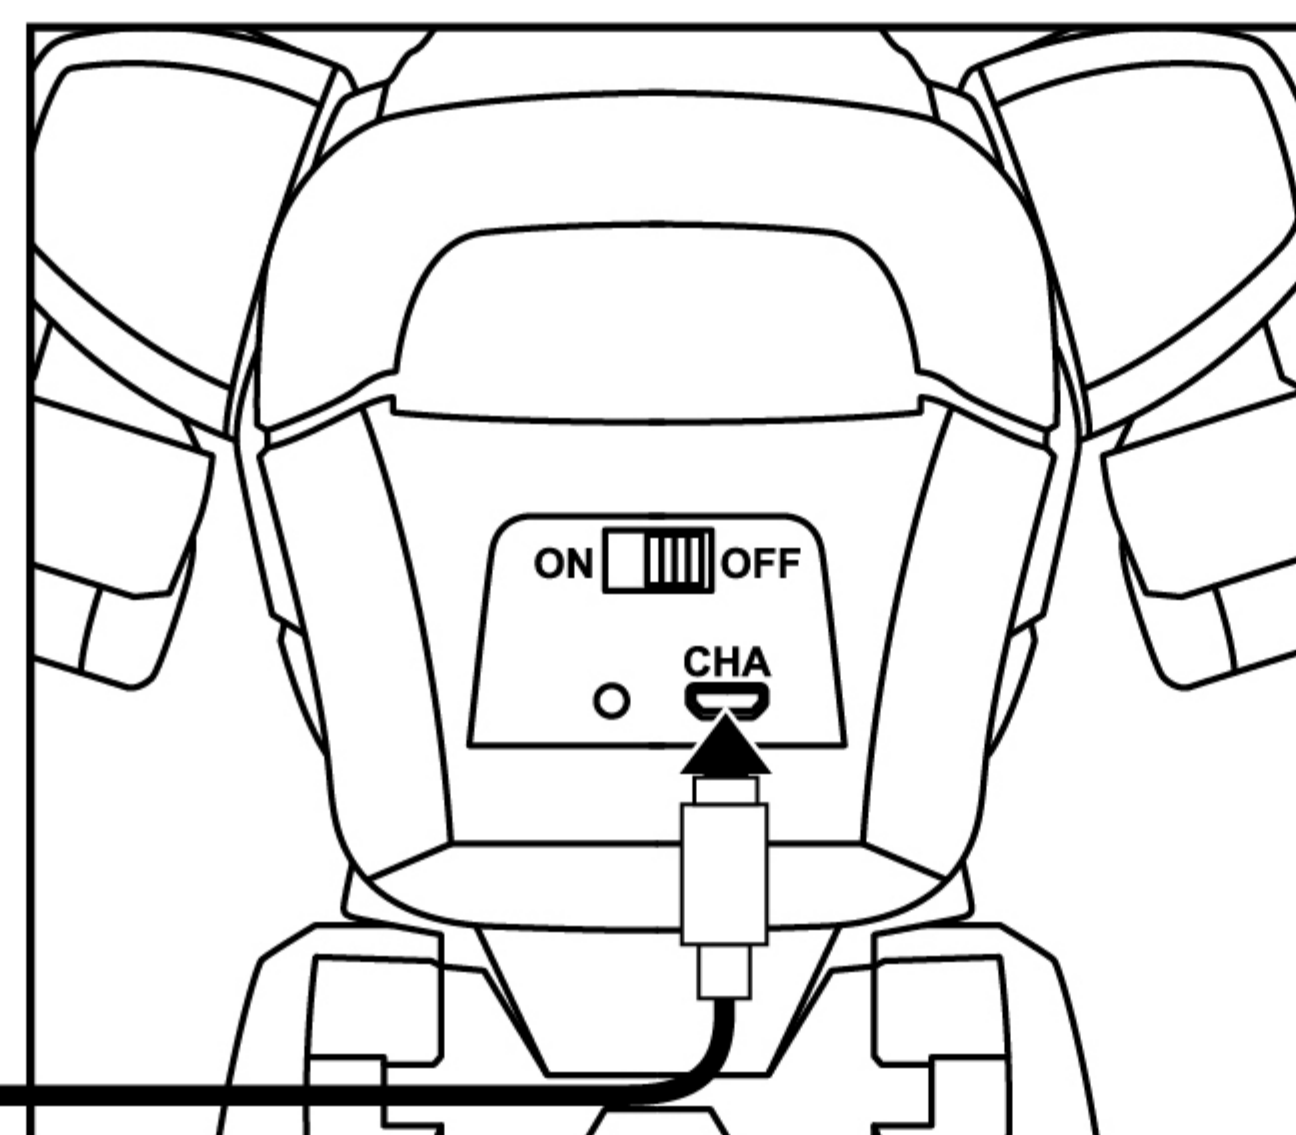


**USB CHARGE LINE**  
CHARGE TIME: ABOUT 3 HOURS

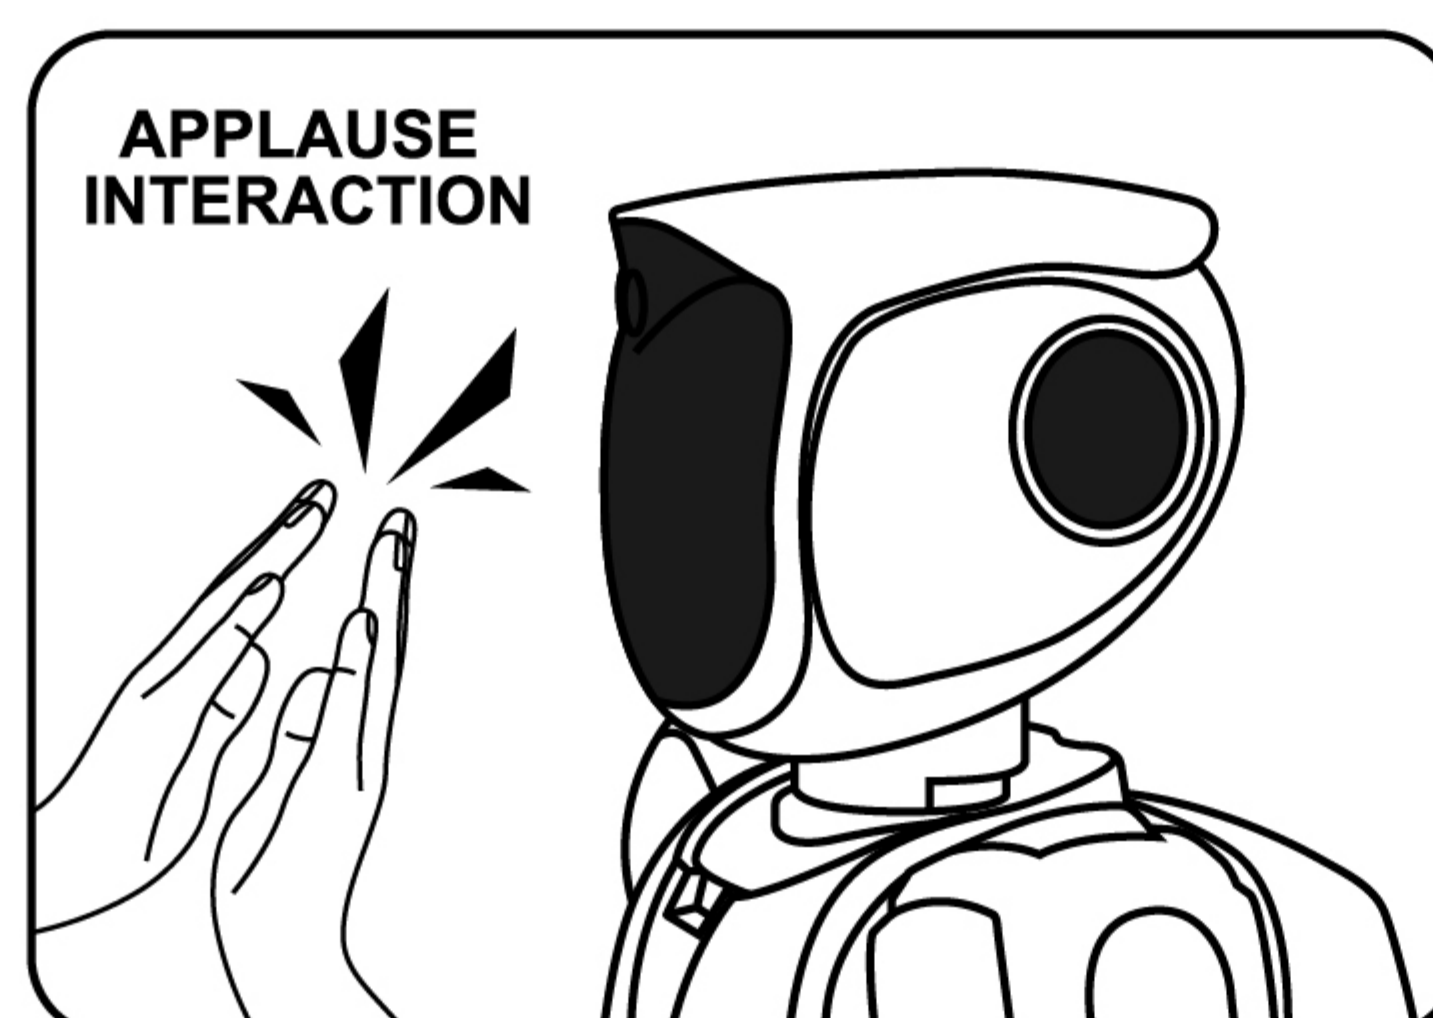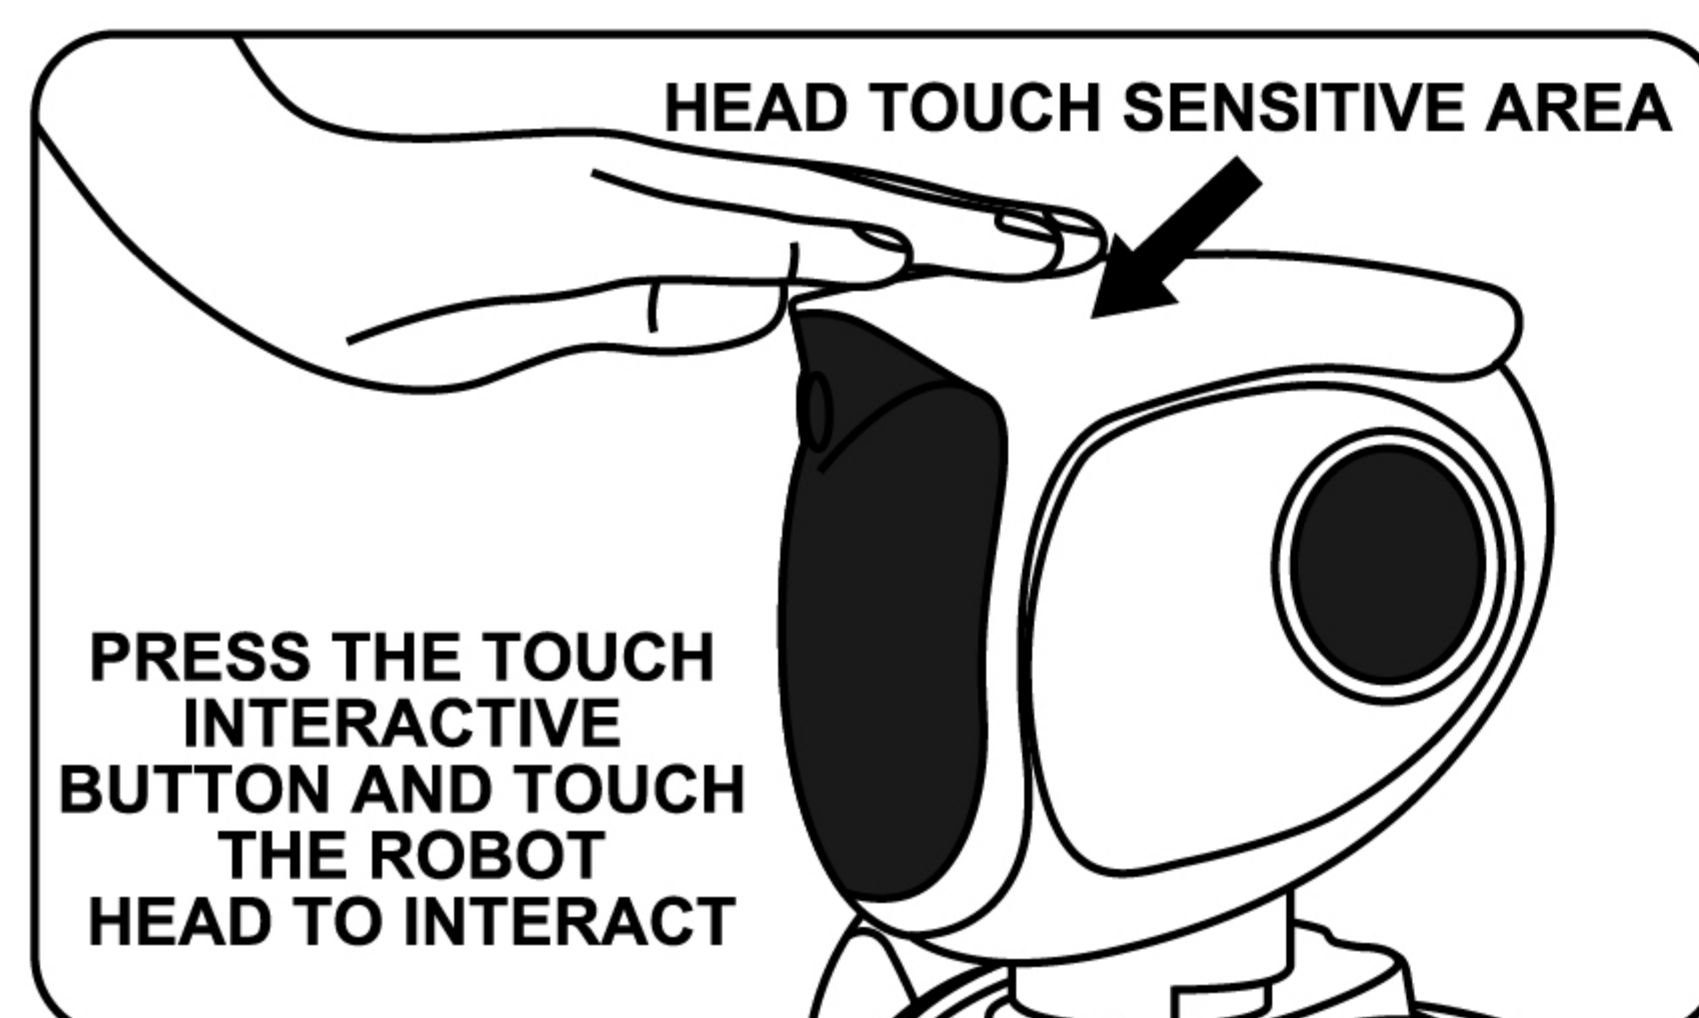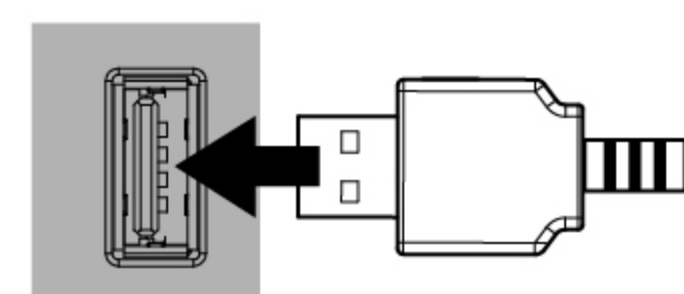


### FUNCTION MANUAL

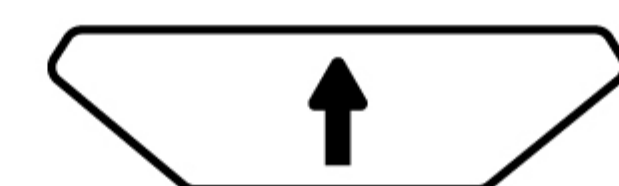

GLIDE FORWARD

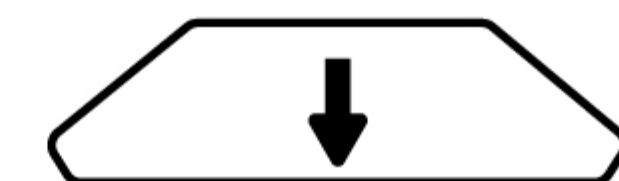


GLIDE BACKWARD

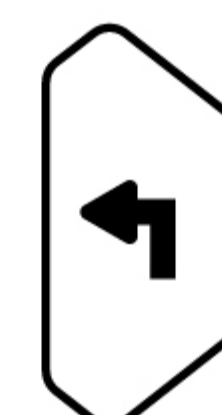

TURN LEFT



FAST/SLOW TOGGLE

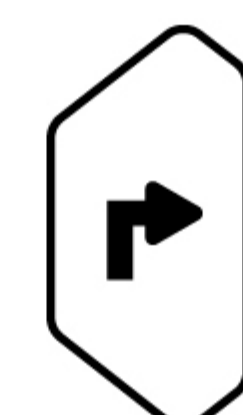


TURN RIGHT




FUNCTION DEMO




**PROGRAMMING**  
PRESS THIS KEY TO ENTER THE  
PROGRAMMING MODE,  
50 ACTION PROGRAMMABLE,  
THEN PRESS THE KEY AGAIN TO PLAY  
BACK THE ACTION SET BY THE PROGRAM.

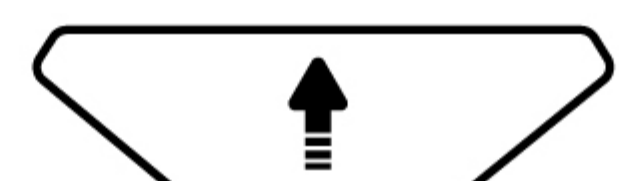

WALK FORWARD

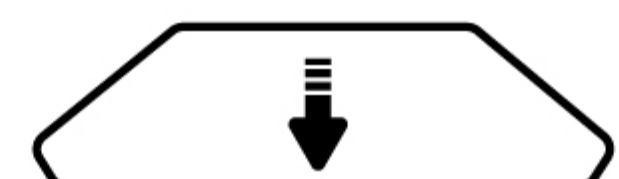

WALK BACKWARD

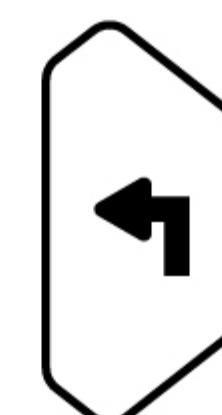

TURN LEFT



FAST/SLOW MODE



TURN RIGHT



TOUCH THE HEAD OF ROBOT,  
INTERACTING WITH IT



INCREASE THE VOLUME



TURN DOWN THE VOLUME



APPLAUSE INTERACTION




HEAD LEFT



HEAD RIGHT



STOP

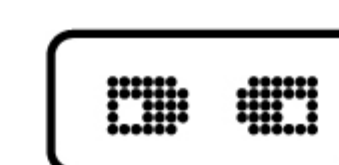

EXPRESSION CHANGE



ROBOT LANGUAGE



ROBOT PATROL



DANCING WITH MUSIC 1



DANCING WITH MUSIC 2



DANCING WITH MUSIC 3



DANCING WITH MUSIC 4



DANCING WITH MUSIC 5