



按键操作说明

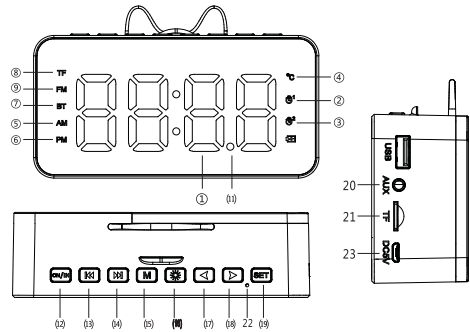

- ① LED 显示屏
- ② 闹钟1指示灯
- ③ 闹钟2指示灯
- ④ °C: 温度
- ⑤ AM: 12小时制, 表示时间上午
- ⑥ MIC (通话麦克风)
- ⑦ **ON/PAUSE**: 长按1.55为开机或关机, 短按为播放与暂停, 收音模式下短按自动搜台
- ⑧ **PREV**: 短按上一曲或上一电台/长按音量减小
- ⑨ **NEXT**: 短按下一曲或下一电台/长按音量增加
- ⑩ **M**: 模式切换, 开机默认进入蓝牙-TF-AUX-收音-纯时钟模式, 长按模式键设置24H与12H时间制式切换, 当切到12小时制式时相应的PM或AM灯会被点亮
- ⑪ **◀**: 短按切换屏亮度从一级到三级, 三级再到一级, 长按 **▶** 关闭屏或开启启亮度
- ⑫ **<**: 进入时钟时用作上翻调节
- ⑬ **>**: 进入时钟时用作下翻调节
- ⑭ **SET**: 短按切换时钟/闹钟显示, 长按进入时钟/闹钟设置状态
- ⑮ **AUX**: 直径3.5MM音频输入接口
- ⑯ **TF CARD**: TF卡插槽
- ⑰ 充电指示灯
- ⑱ DC 5V: 5V1A直流充电输入
- ⑲ PM: 12小时制表示时间下午
- ⑳ BT: 蓝牙模式显示
- ㉑ TF: TF卡模式显示
- ㉒ FM: FM模式显示

FUNCTIONAL BUTTONS OPERATION

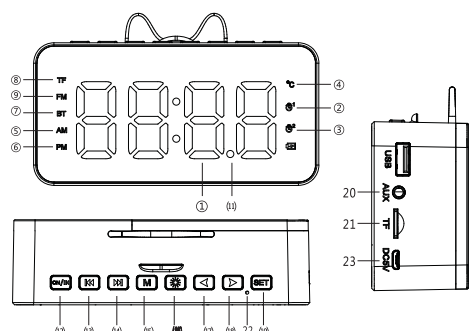

- ① LED Screen
- ② Alarm clock 1
- ③ Alarm clock 2
- ④ °C: Temperature Indicator
- ⑤ AM: AM = morning
- ⑥ MIC for Hands Free Phone Call
- ⑦ **ON/PAUSE**: Pause/Play/ON/OFF
- ⑧ **PREV**: Previous / Volume down
- ⑨ **NEXT**: Next / Volume up
- ⑩ **M**: Mode
- ⑪ **Brightness**: Adjust Screen Brightness
- ⑫ **<**: Decreasing
- ⑬ **>**: Increasing
- ⑭ **SET**: Set
- ⑮ **AUX**: AUX in / line in Socket
- ⑯ **TF CARD**: TF Card Slot
- ⑰ **Battery Charge Indicator**
- ⑱ **DC 5V**: Micro USB Charging Port
- ⑲ PM: PM=afternoon
- ⑳ Bluetooth Music Playing Indicator
- ㉑ TF: TF Card Music Playing Indicator
- ㉒ FM: FM radio Playing Indicator
- ㉓ Phone Holder

音箱使用说明

- 一. 手机蓝牙的连接方法
打开电源开关, 并有相应的开机语音提示: 打开手机蓝牙设置, 进入搜索, 当搜索配对成功后, 同时手机上显示“Q9”已连接, 同时有语音提示“配对成功”可以打开手机播放器播放歌曲即可, 断开蓝牙提示音“蓝牙断开”
- 二. TF 插卡
将音乐文件的TF卡插入音箱, 按 (M) 键切换到插卡 (TF) 模式, 音箱就能播放TF 的音乐文件
TF 卡支持的持最大容量: 32 G
- 三. FM 收音机
按M键切换到收音 (FM) 模式, 将本机配备的充电线插入充电孔, 短按**ON/PAUSE**键音箱自动搜索电台, 搜索完电台后, 自动保存电台, 直接播放搜到的电台
(注: 收音效果会因环境因素和信号强度不同而有所不同, 信号强, 收音效果好, 信号弱收音效果会差一些)
- 四. 充电使用方法
1. 当音箱内置电池电量不足时, 音箱会发出低电提示音后自动关机, 此时将本配备的USB充电线, 一端插入本机的DC充电插孔, 一端插入电脑的USB插孔或 (5V 1A) 手机充电器的USB插孔即可充电, 充电时亮红灯, 充满灭灯
2. 电池充电时间一般为4个小时左右, 充满后最大音量状态能连续播放6-8小时在默认音量状态下能连续播放16个小时左右, 时钟显示状态下待机时间约为48小时左右
- 五. 复位功能
当按音箱上的按键无效时, 电池电量不足会出现这种现象, 如音箱充满电出现这种现象, 此时可对音箱进行复位操作: 重启复位键位于音频输入AUX接口内, 可以通过牙签往AUX口里插一下重新开机即可恢复正常使用
- 六. 常见问题解决方法
1. 蓝牙多次连接配对不成功: (1) 重新机配对: (2) 周边蓝牙设备太多, 造成搜索困难, 关闭其他蓝牙设备
2. 声音过小或失真: (1) 电池电量不足 (2) 调节音量到适合大小
3. 蓝牙音乐播放出现断音: 是否超出音箱有效连接距离, 或音箱和手机间有障碍物

通话状态

- 1. 接听: 在蓝牙状态下来电时, 短按播放/暂停键
- 2. 挂机: 在蓝牙状态下通话中, 短按播放/暂停键
- 3. 拒听来电: 在蓝牙状态下来电时, 长按播放/暂停键

注: 通知功能仅在蓝牙模式下实现。

时间/闹钟设置操作指南

- 1. 时间设置
长按电源“**ON/PAUSE**”打开音箱电源, 单击“SET”关闭所有闹钟界面, (注: 如图2所示无闹钟图标), 长按“SET”显示屏先闪烁要设置的“时钟”
单击“<、>”键调整想要的时钟数, 再单击“SET”键跳到“分钟”闪烁设置分钟数, 单击“<、>”键调整想要的时钟数, 设置完后再次长按“SET”键退出设置并保存。
- 1. (1) 闹钟1设置: 长按电源“**ON/PAUSE**”打开音响电源, 单击“SET”进入闹钟1模式 (注: 如图6所示显示闹钟1图标), 再长按“SET”显示屏先闪烁要设置的“时钟”, 单击“<、>”键调整想要的时钟数, 再单击“SET”键跳到“分钟”闪烁设置分钟数单击“<、>”键调整想要的时钟数, 再单击“SET”进入闹钟铃声选择: 单击“<、>”键调整想要的铃声, 再长按闹钟音量加減, 再长按“SET”键, 退出并保存当前闹钟1设置。
(2) 闹钟2设置: 设置完闹钟1后, 自动跳转到闹钟模式, 单击“SET”进入闹钟2模式, 再长按“SET”显示屏先闪烁要设置的“时钟”, 单击“<、>”键调整想要的时钟数, 再单击“SET”键跳到“分钟”闪烁设置分钟数: 单击“<、>”键调整想要的`时钟数, 再单击“SET”进入闹钟铃声选择: 单击“<、>”键调整想要的铃声, 再长按闹钟音量加減, 再长按“SET”键退出并保存当前闹钟2设置。

产品保修说明书

- 一、保修凭证
请将此保修卡妥善保存, 若保修卡遗失恕不补发, 产品故障维修时需要出示此卡, 若您无法提供保修卡和相关购买凭证, 则产品保修期将以机身出厂日期贴对应的出厂日期为准。
- 二、国家“三包”服务条件
1、自售出之日起7日内, 发生性能故障, 我公司免费为消费者退货或换货处理, 但前提必须是该产品的包装完整, 外观无划痕或有油污, 可以进行二次销售的产品标准, 换货时, 我公司免费为消费者调换同型号的产品; 产品自售出之日起15日内, 发生性能故障, 我公司将为消费者提供免费维修服务或者按标准收费换同型号的产品; 自售出之日起一年以内, 发生性能故障, 我公司则给予消费者维修服务, 按公司标准收取相应的配件费用和维修费用。
- 三、保修条款
主机自购买之日起, 在正常使用情况下发生非人为损坏保修一年, 下列情况不在免费保修范围内:
1、超过保修期。
2、本产品售出后人为原因造成的损坏。
3、不按正确方法操作或保管。
4、未经授权用户自行拆开机器进行维护修理。
5、浸泡、损坏或者燃烧电路板。
6、正常磨损导致产品外观有操作, 划伤, 损坏等。
7、地震、火灾等不可抗力因素造成的损坏。
8、与产品无关的其他原因所致。

四、保修范围

- 1、本产品配件, 如: 充电线、电池等易损配件不属于本产品保修范围。
- 五、注意事项:
1、本机器如果长时间不使用, 请将电源开关至于关闭状态并定期充电 (以大约90天为周期)。
2、在下列情况下请立即充电: 电源指示灯提示电量不足或者按操作均无反应。
3、避免在如下环境使用或存放: 潮湿、多尘、以及异常干燥的区域, 避免在阳光直射或过冷过热的环境, 避免与水和其他液体接触。
4、使用时不要让机器排落或与硬物摩擦、撞击, 否则会导致机器表面磨伤、电池损坏或者其他硬件损坏。

产品保修卡

购买本产品时, 请认真填写此卡, 并予以妥善保管,

产品型号: _____

购买日期: _____

用户名: _____

用户地址: _____

联系电话: _____ 邮编: _____

经销单位: _____

地址: _____

负责人: _____

联系电话: _____ 邮编 _____

- ☐ 凭本卡保修
- ☐ 请注意保留

产品参数

- FM收音频率: 87.5MHz-108MHz
- 蓝牙版本: 5.0
- 电源输入: 5V---1A
- 频率响应: 80Hz-20KHz
- 信噪比: ≥85dB
- 产品尺寸: 123*60*36mm
- 电池类型: 3.7V
- 输出功率: 3W THD=10%
- 扬声器: 3Ω/5W
- 失真度: <0.5%

温馨提示: 电池属于易耗品, 具有一定的使用寿命, 不属于保修范围

AUX IN

- 1. Press and hold the button“**ON/PAUSE**”to turn on the speaker.
- 2. Press the button“**M**”for the AUX mode.
- 3. Plug into the 3.5mm audio cable (Aux Cable not include) and connect to other audio players to play music or other audio files.

CLOCK SETTING

- a. When the clock is displayed, press the button“SET”to cancel“**1** icon and“**2** icon.
- b. Press and hold the button“SET”and enter clock setting. When the hour number flashes, press the button“<”or“>”to adjust the hour number.
- c. Continue to press the button“SET”, the minutes number flashes, press the button“<”or“>”to adjust the minute number.
- d. Finally, press the button“SET”, exit setting and save it.

ALARM CLOCK SETTING

- 1. **Turn ON/OFF Alarm Clock**: Press the button“SET”,“**1** icon always bright means only turn on the alarm clock 1. Continue press the button“SET”,“**2** icon always bright means only turn on the alarm clock 2. Continue press the button“SET”,“**1** icon and“**2** icon always bright means turn on the alarm clock 1 and alarm clock 2. Finally, press the button“SET”to turn off these two alarm clocks, there will no“**1** icon on screen.

Alarm Clock 1 Setting

- a. Press the button“SET”,“**1** icon indicator lights on and time display is in static state press.
- b. Hold the the button“SET”enter alarm clock 1 setting. When the hour number flashes, press the button“<”or“>”to adjust the hour number.
- c. Continue to press the button“SET”, the minutes number flashes, press the button“<”or“>”to adjust the minute number.
- d. Continue to press the button“SET”and then press the button“<”or“>”to choose ringing from L-1 to L-5.
- e. Finally, press the button“SET”to exit setting and save it.

Alarm Clock 2 Setting

- a. Alarm Clock 2 Setting: Press the button“SET”,“**2** icon indicator lights on and time display is in static state press.
- b. Hold the the button“SET”enter alarm clock 2 setting. When the hour number flashes, press the button“<”or“>”to adjust the hour number.
- c. Continue to press the button“SET”, the minutes number flashes, press the button“<”or“>”to adjust the minute number.
- d. Continue to press the button“SET”and then press the button“<”or“>”to choose ringing from L-1 to L-5.
- e. Finally, press the button“SET”to exit setting and save it.

SPECIFICATIONS

- Bluetooth version: 5.0
- Frequency Response: 80Hz-20KHz
- Radio Frequency: 87.5MHz-108MHz
- Temperature range: -30°C—50°C
- Display Dimmer: 3-Level
- Battery: 3.7V
- Size W x D x H: 131*46*69mm
- Output Power: 3W THD=10%
- SNR: ≥65dB
- Distortion: <0.5%
- Speaker: 3Ω/5W
- Item Weight: 0.32kg

Battery Life

Built-in Rechargeable Battery: 3.7V

Playing Time: Approx. 3-6 hours (Playing volume)

Charging Time: Approx. 3-4 hours

Stand by: Approx. 200 hours

ACCESSORIES

- 1 x Speaker
- 1 x User Manual
- 1 x Micro USB Charging Cable

NOTES

- 1. Please READ the user manual carefully before using this product and keep the it for future reference.
- 2. Please wipe the LED screen with lens cloth gently to avoid scratching the surface.
- 3. Connection: Bluetooth, up to 16G Micro SD card, 3.5 line-in Aux Cable, 87.5-108MHz.
- 4. Built-in rechargeable battery, this device can be charged from mobile phone adaptor or computer. When the speaker prompts tone battery low, please charge the speaker. If do not use it, please turn it off. If you do not use it for a long time, please charge it within 2-3 months to protect the battery.
- 5. When the speaker is malfunction, please insert and press the“RESET”button built in the AUX socket, use some tools like straighten clip.