# V5智能说明书-105\*145mm-128G铜版单色印刷-折页


产品功能详细说明图

10. 场景切换键

> 产品功能简介

1.支持12V车辆电瓶亏电应急启动。

## Newsmy 启动充气一体机

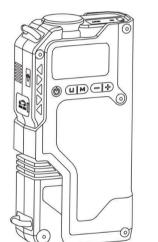

# 使用说明书

使用前请仔细阅读本说明书,按照操作指引正确的使用产品!

3.支持胎压检测功能,显示屏显示当前胎压数据。

4.支持快充3.0协议,可快速给手机、平板电脑充电。

2.支持汽车、摩托车、自行车、篮球等充气物品充气。

5. 汽车启动输出口

9. 预设气压 - 键


12. 出气口

8. 预设气压+键

11. 单位切换键

5.支持LED照明,以及强光爆闪、SOS求援等应急照明模式。

> 产品详细配件图

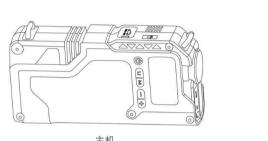









#### 1. 产品充电操作

将USB线插入本产品的充电输入口 ② 和电源充电器(USB5V/2A)输出 口,产品开始充电,充电过程中显示屏的电量图标显示循环闪烁,电量图标显 示4格时,表示充满电。

温馨提示:电源充电器为选配件。也可使用符合规格要求的手机充电器。

> 功能操作说明

a. 将标配的智能线夹与本产品的汽车启动输出口 **5** 连接,智能线夹红绿 灯交替闪烁。(注意:智能线夹要插入到位,否则影响启动效果)

b. 将智能线夹的红色夹子端夹紧车辆电瓶的正(+)极,黑色夹子夹紧车辆电

c. 正确连接后,智能线夹绿灯亮,即可进行启动车辆操作。

d. 车辆启动完成后,将智能线夹从本产品的汽车启动输出口 **5** 抽离,再移













#### a. 为保证最佳的启动效果,请确保本产品电量充足(不少于3格电量)的情况 下,进行车辆启动操作,并保证关闭车辆中所有用电设备。

b. 确保智能线夹子与电瓶极柱接触充分牢固,较大接触面积有利于电流的 传导,增强启动性能。

#### 3. 充气功能操作

a. 长按开关键 6 2秒开机,再短按场景切换键 10,根据需要选取4种充气 

场景模式	参考默认值	
汽车	35 PSI	
摩托车	40 PSI	
自行车	35 PSI	
篮球	8 PSI	

> 功能操作说明

b. 短按单位切换键 🕠 切换气压单位,切换顺序BAR/PSI/KPA/kg/cm²。 c. 短按预设气压+键 8 或-键 9, 可调预设气压值, 长按3秒后则进入快速

d. 将气管的螺纹端与本产品的出气口 ① 拧紧, 再选取适合的气嘴与被充气

e. 正确设置和连接后,短按开关键 6 开启气泵充气(实时气压值≥预设气 压值,无法开启气泵充气)。

f. 充气气压值达到预设气压值,自动关闭气泵充气(充气过程中,短按开关键 由世宗早

. 充气完成后,从被充气物品上面取下气嘴,再从主机上面拧下气管。

a. 预设气压显示闪烁状态,则进入预设模式,可设置场景模式、气压单位切 换、预设气压值,停止操作上述功能按键3秒后,退出该预设模式转为开启模 式(进入预设模式,按开关键无法开启气泵充气)。

b. 退出预设模式后,软件自动保存设置。长按场景切换键 🕡 5秒恢复出厂

c. 气压单位换算公式:1BAR=14.5PSI=100KPA=1.02kg/cm<sup>2</sup>

注意:长时间工作气管会产生高温,请勿立即直接用手或身体其它部位,触 碰气管与本产品连接的金属头。捏住隔热硅胶套再拧下气管。

#### 4. 打开LED照明灯

长按开关键 6 2秒开机,再长按LED照明键 4 2秒开启照明灯,再次短 按LED照明键,切换照明强光、爆闪、SOS求援模式。长按LED照明键2秒关闭

长按开关键 6 2秒开机,即可打开USB输出,然后将充电线插头插入 USB输出口 ① 便可开始给手机、平板电脑等设备充电。

> 功能操作说明

本产品具有电源节能管理功能,系统检测无功率输出后,启动节能模式, 将在30秒后自动关机。

**全**回扣自绞啪

### > 技术规格

<b>参</b> 见机身铭牌
参见机身铭牌
150PSI (MAX)
19mm
120W
5V 2A (电流范围0.5A-2A)
参见包装铭牌
5V 3.0A;9V 2A;12V 1.5A
0°C ~ +45°C
-20°C ~ +70°C
206*110*54mm

### > 故障排除

故障代码显示	原因	故障排除方法	2.
E01	气泵高温保护	请停止产品使用,建议间隔5分钟以上再使用	3.
E02	气压异常保护	请联系客服	4.

### > 配件清单

数量	配件名称	数量	配件名称
1	USB线	1	主机
1	说明书(内含合格证)	1	智能线夹
		1	气管

#### 产品中有毒有害物质或元素的名称及含量

	有毒有害物质或元素					
产品名称	铅(Pb)	汞(Hg)	镉(Cd)	六价鉻 Cr (Vi)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
充气启动 一体机	0	0	0	0	0	0

O:表示该有害物质在该部件所有均质材料中的含量均 在2002/95/EC (RoHs) 标准规定的限量要求以下。

### > 注意事项

- . 若长时间未使用本产品,建议每三个月至少给产品充满电一次 在使用或充电过程中,本产品如果轻微发热,属于正常现象,并非故障。
- 若车辆需要尝试多次启动,每次启动操作必须间隔60秒以上。若尝试3~5次 后始终无法启动,建议应进一步检查车辆是否存在其它故障。
- . 在操作过程中,请勿将智能线夹两端触碰,否则可能引起安全风险。
- 向产品用户提供从产品购买之日起12个月的保质期。 在操作过程中,请勿将智能线夹的正负极与车辆正负极接反,否则可能引起
- . 设置预设气压值之前,请确认压力单位选择正确,单位混合使用可能引起; 度充气的安全风险。
- 设置预设气压值之前,根据被打气物品的安全压力值范围内设置,超出安全 压力值范围可能引起安全风险。
- . 气泵充气连续工作15分钟,需要间隔5分钟以上,可再次继续使用
- ,请勿拆卸或改造本机,以免损坏机器或造成安全风险,失去保修。
- . 请妥善保管本产品,避免儿童接触产品。
- 为保证最佳的充电性能,请使用正规厂家生产的电源充电器(5V/2A)给产品
- . 建议在安全环境下使用此产品,远离以下使用环境,规避安全风险
- •潮湿的地方以及容易被水溅到的地方
- 近离高温、火源、腐蚀、化学气体危害的地方。
- ●远离泥沙的地方。
- •容易掉落的地方。 存放有易燃易爆物的地方
- 存放于剧烈颠簸的地方。


本产品为客户提供自购买之日起12个月内的保修服务

保障条件:需要保修服务时,请出示本保修卡,并请详尽填写相关内容。本公司

\_\_\_\_\_\_

合格证

本产品由三井住友海上火灾保险(中国)有限公司承保,可以放心使用。



获取更多服务信息,请拨打服务电话或访问纽曼公司网页 湖南纽曼智能设备科技有限公司

产品异常现象描述

服务热线:400-169-6606

热线服务时间:周一至周五早9:00~晚18:00(不含法定节假日) 网址:http://www.newsmv.com 邮编:410100

维修日期

地址:长沙经济技术开发区漓湘东路128号C1栋二层

1、在正常使用的状态下出现产品质量问题。

3. 自行拆机后,不予保修。

客户姓名


4、标贴撕毁的机器,不予保修。

2. 如因操作失误造成对产品的损害,不在保修范围。

不在保修范围内的产品,我司可提供维修服务,维修费用需由客户承担。

## Newsmy

Start the inflatable machine

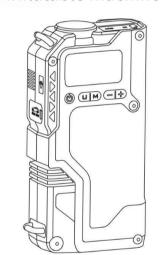

Detailed description of product functions

5. Car start output port 6. On/off key 8. Preset air pressure + button 9. Preset air pressure - button

10. Scene switch key 11. Unit switch key 12. Air outlet


### > Product Function Introduction

. Support emergency starting when the 12V vehicle battery is low. 2. Supports inflating of inflatable items such as cars, motorcycles, bicycles, basketballs

3. Support tire pressure detection function, the display screen shows the current tire pressure 4. Supports Quick Charge 3.0 protocol, which can quickly charge mobile phones and

5. Stipport LED lighting, as well as emergency lighting modes such as strong light lashing and SOS assistance.

> Product accessories details

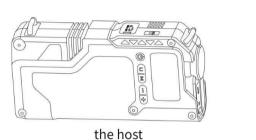





Functional Operation Instructions

The product starts charging. During the charging process, the battery icon on the display flashes in a cycle. When it shows 4 bars, it means it is fully charged.

Tips: The power charger is an optional accessory. You can also use a mobile phone charger that meets the specification requirements.

### >Functional operation instructions

The lights flash alternately. (Note: The smart wire clip must be inserted in place, otherwise it will affect the starting ef I. Tighten the threaded end of the air pipe to the air outlet 12 of this product, and then select a suitable air nozzle and the

The negative (-) terminal of the bottle. c. After correct connection, the green light of the smart wire clamp will turn on and you can start the vehicl

d. After the vehicle is started, remove the smart wire clip from the vehicle start output port ③ of this product, and then r move the red and black clips of the smart wire clip (it



This product connects Connect to car battery Smart cable clip Remove the clar Positive and negative poles

a. To ensure the best startup effect, please make sure that the product has sufficient power (no less than 3 bars of po

Start the vehicle and ensure that all electrical devices in the vehicle are turned of Conductivity, enhancing starting performance.

Dedicated scene modes.

Reference Default Value 35 PSI

motorcycle

### Functional Operation Instructions

Short press the preset air pressure + key ③ or - key ③ to adjust the preset air pressure value. Long press for 3 seconds to enter the Adjust the preset air pressure value.

The air pump cannot be turned on to inflate).

The air pump can be turned off to inflate).

mode (entering the preset mode, pressing the power button cannot turn on the air pump to inflate

Functional Operation Instructions

. Short press the unit switch button 11 to switch the air pressure unit. The switching order is BAR/PSI/KPA/kg/cn

It will automatically shut down after 30 seconds.

> Technical Specifications

Charging temperature range  $0^{\circ}\text{C} \sim +45^{\circ}\text{C}$ 

Discharge temperature range -20°C ~ +70°C

See the nameplate on the fuselag Cell capacity See the nameplate on the fuselage Starting current

5V-- 2A (current range 0.5A-2A)

5V = 3.0A; 9V = 2A; 12V = 1.5A

206\*110\*54mm

See packaging nameplate

150PSI (MAX)

inflation pressure After stopping the above function buttons for 3 seconds, the preset mode will be exited and the on mode will be Cylinder diameter

Cylinder rated power

c. Air pressure unit conversion formula: 1BAR=14.5PSI=100KPA=1.02kg

Press and hold the power button for 2 seconds to turn on the device, then turn on the USB output and plug the charging cable into the The USB output port① can start charging mobile phones, tablets and other devices.

> troubleshooting

Fault code display reason Abnormal air pressure protection Please contact customer serv

### > Parts List

Accessory name quantity Accessory name quantity **USB** cable Smart cable clip trachea 1

Name and content of toxic and harmful substances or elements in the pro

Toxic and harmful substances or element | Cr (vi) | (PBB) | (PBDE) One machine

O: Indicates that the content of the hazardous substance in all homogeneous materials of the component is Below the limit requirements stipulated in 2002/95/EC (RoHs) standard.

#### "Precautions

If the product is not used for a long time, it is recommended to fully charge it at least once every t

. If the product becomes slightly hot during use or charging, this is normal and not abla m If the vehicle needs to be started multiple times, each start operation must be separated by more than 60 seconds.

This product provides customers with warranty service within 12 months from the date of purchase

uring operation, do not touch the two ends of the smart wire clamp, otherwise it may cause safet√risks.

Safety risks of over-inflation. Before setting the preset air pressure value, set it within the safe pressure range of the inflated of

Before setting the preset pressure value, please make sure that the pressure unit is selected correctly. Mixing units may cause ove

The range of pressure values may cause safety risks.

. Please keep this product properly and keep it out of reach of children.

To ensure the best charging performance, please use a power charger (5V/2A) produced by a regular manufacturer to charge the

• Humid places or places that are easily splashed with water. Keep away from places with high temperature, fire, corrosion and chemical gas hazards. Keep away from mud and sand.

Places where it is easy to fall.

Places where flammable and explosive materials are stored.

· Store in a place with severe vibration.

Product users are provided with a 12-month shelf life from the date of product purchase

1. Product quality problems occur under normal use.

2. Any damage to the product caused by operational errors is not covered by the warranty 3. After dismantling the machine by yourself, the warranty will not be valid.

4. Machines with torn labels will not be under warranty.

Product number

Customer Name

customer address

Purchase date

For products not covered by the warranty, our company can provide maintenance servides, and the maintenance costs must be borne by the customer.

solemn commitment



For more service information, please call the service hotline or visit the Newman website Hunan Newman Intelligent Equipment Technology Co., Ltd. Service Hotline: 400-169-6606

Hotline service hours: Monday to Friday 9:00 am ~ 18:00 pm (excluding stat↓tory holidays) Website: http://www.newsmy.com Zip code:410100

Serial number

contact number

Repair date

Description of product anomalies













